100

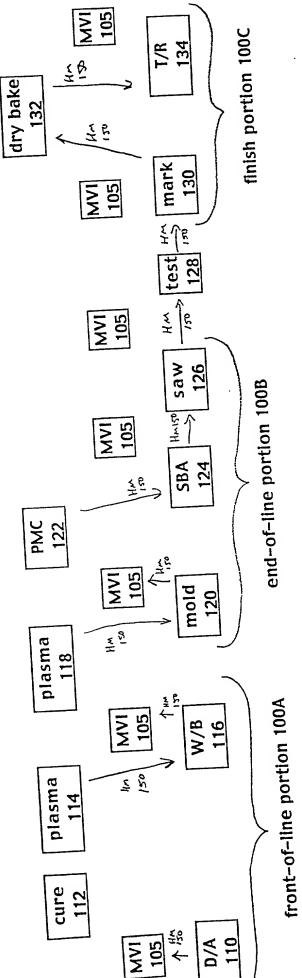


FIGURE 1

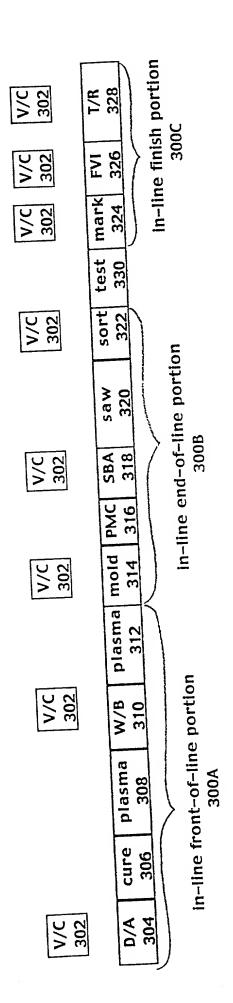


FIGURE 2

## in-line front-of-line portion 300A

N/C	V/C 302
V/C	302
302	<u></u>

				mlacm2
7 (1	CUPA	plasma	W/B	plasma
D/A	cure	•	310	312
304	306	308	310	

## in-line end-of-line portion 300B

V/C	V/C	V/C
302	302	302

					,
m	old	PMC	SBA	saw	sort
	14	316	318	320	322
J	17	<u> </u>			

## in-line finish portion 300C

V/C 302	V/C 302	V/C 302
mark	FVI	T/R
224	326	328



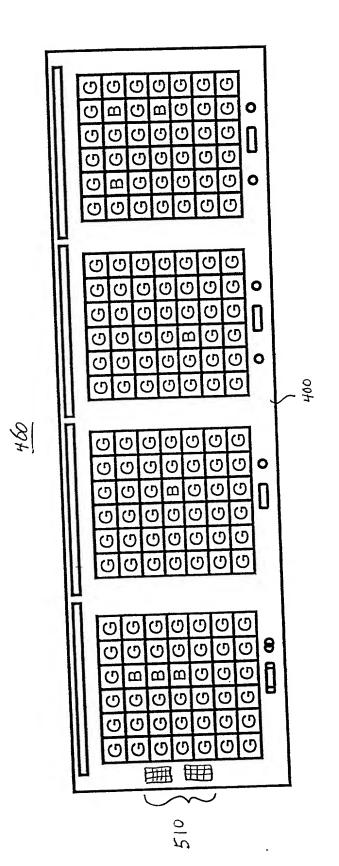


Figure 4

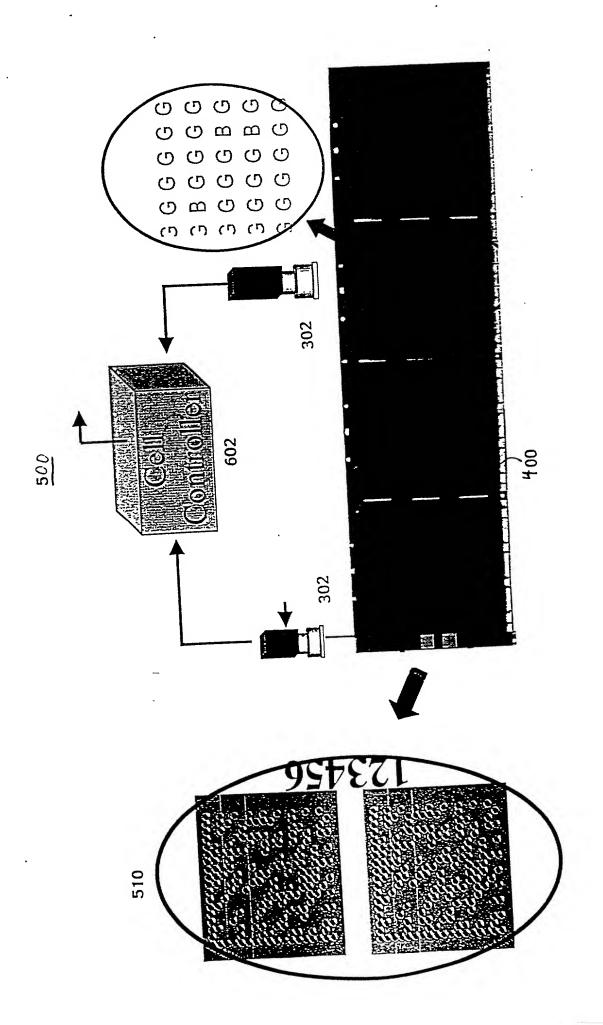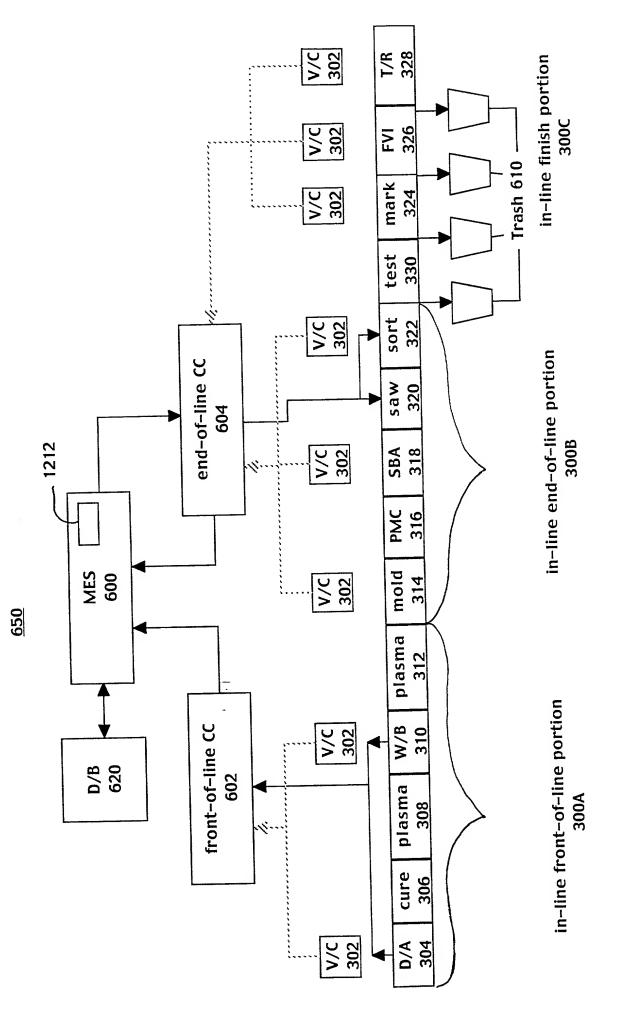

Flgure 5



**FIGURE 6** 

FIG. 7

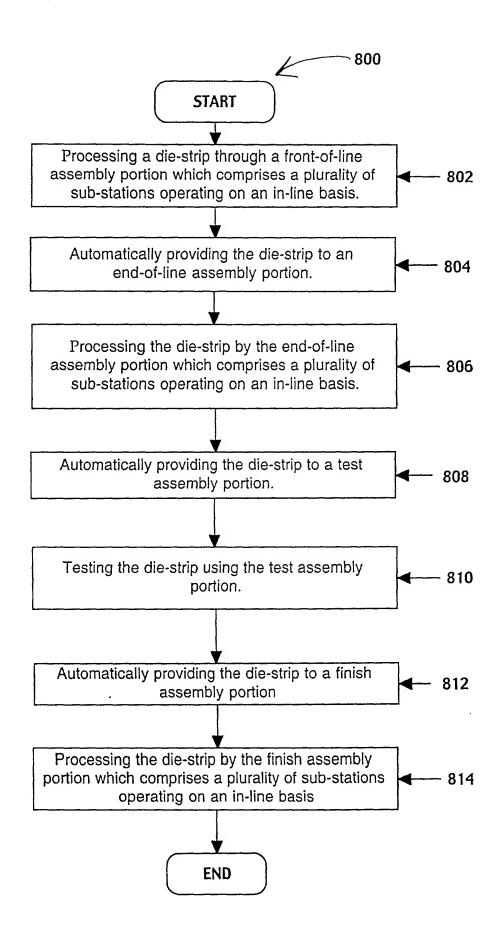
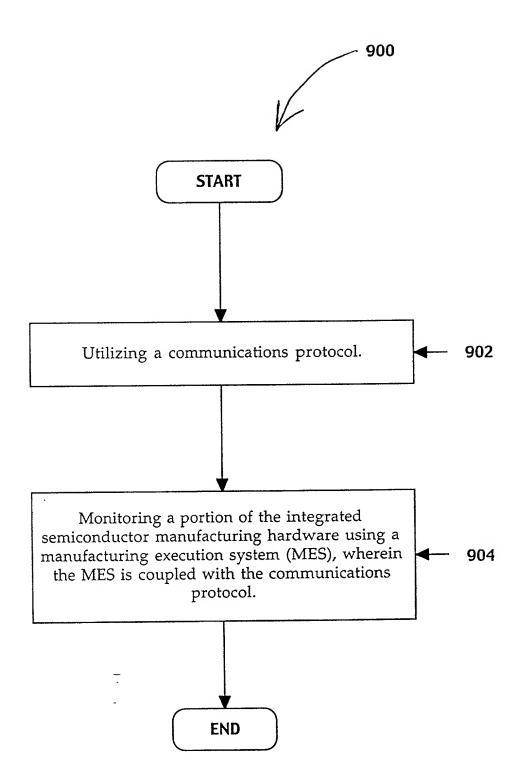


FIGURE 8



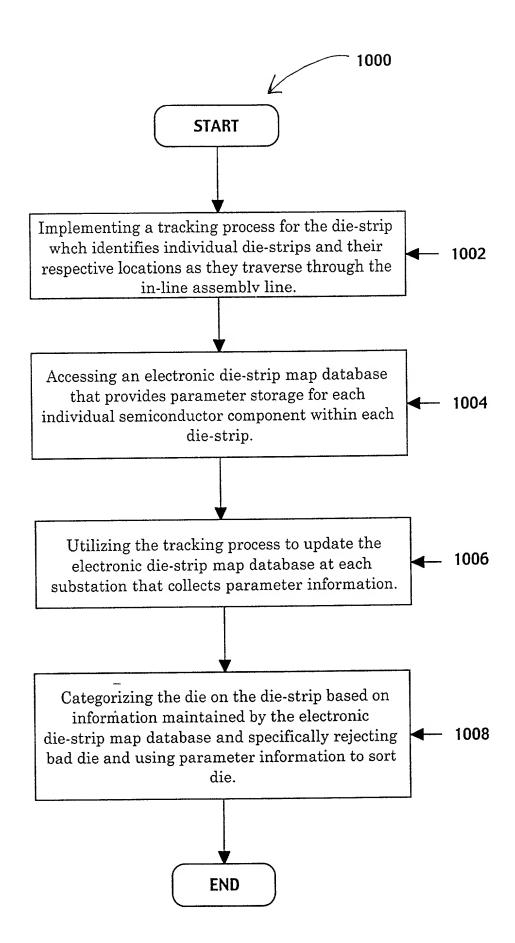


FIGURE 10

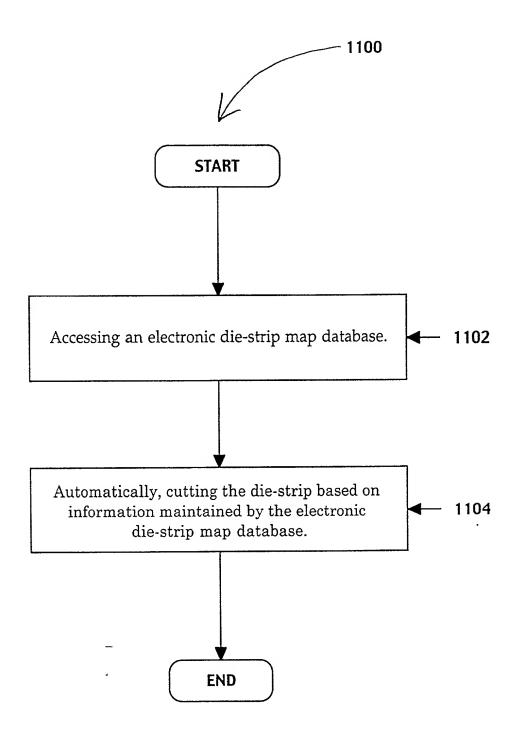


FIGURE 11


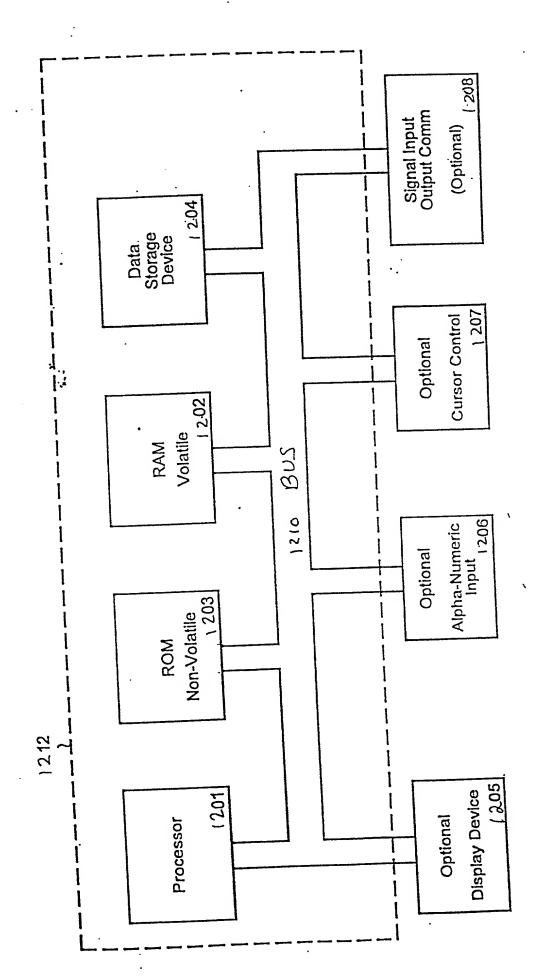


FIGURE 12

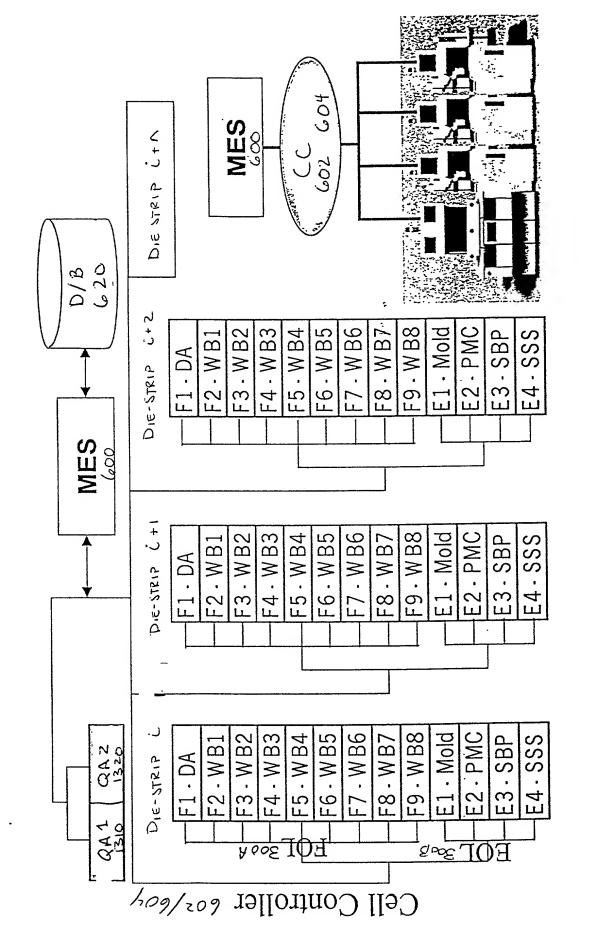

F16 13